



10" x 18" SURFACE APPLY INSTALLATION INSTRUCTIONS For Tactile Warning Delineator (TWD) Tiles

Background: The following installation instructions are for separating sidewalk-level bicycle & pedestrian pathways.

Locate areas to receive TekWay TWD Tiles. Determine layout of tiles and, if necessary, precut tiles prior to beginning the installation process using a concrete saw with a diamond blade.

Before installing, ensure you have the following items on-site.

| Tools | Materials |
|------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> • Caulking Gun | <ul style="list-style-type: none"> • Adhesive (tested with Loctite PL3x Premium Constuction Adhesive) |

Step 1: Preparation of TWD Tile:

- Locate areas to receive TekWay Tactile Warning Delineator (TWD) Tiles.
- Surface receiving the tiles must be free of any debris or foreign materials. Any imperfections that will prevent full contact between the tile and the surface must be corrected using a grinder or other suitable tool.

Step 2: Starting installation of the TWD Tiles (End Cap):

- Determine where the End Cap will be placed and mark the area.
- Place the tile with the flat side up on the surface.
- Using the caulking gun with adhesive tube installed, run a 1/4" to 3/8" bead around the edge approximately 1/2" away from the outside edge of the tile.
- Run another bead of adhesive in a zig-zag pattern in the middle of the tile (see figure 1)



figure 1

Step 3: Installing the TWD Tiles:

- Locate the starting mark area.
- Place the TWD Tile (End Cap) over the marked area.
- Apply pressure evenly over the tile until tile is settled.

Step 4: Installing the remaining TWD Tiles:


- Apply adhesive as shown in figure 1.
- Place tile next to previously installed tile and apply pressure evenly until tile is settled.
- Repeat until other end is reached. Install an End Cap if run requires a transition.

Note: To reduce potential water pooling, a space may be left between tiles (3/8" maximum).

Note: Sunlight damages the protective covering! The removal of this covering within 48 hours will ensure a quality and maintenance free installation (if applicable).



TekWay® TACTILE WARNING DELINEATOR (TRAPEZOID)

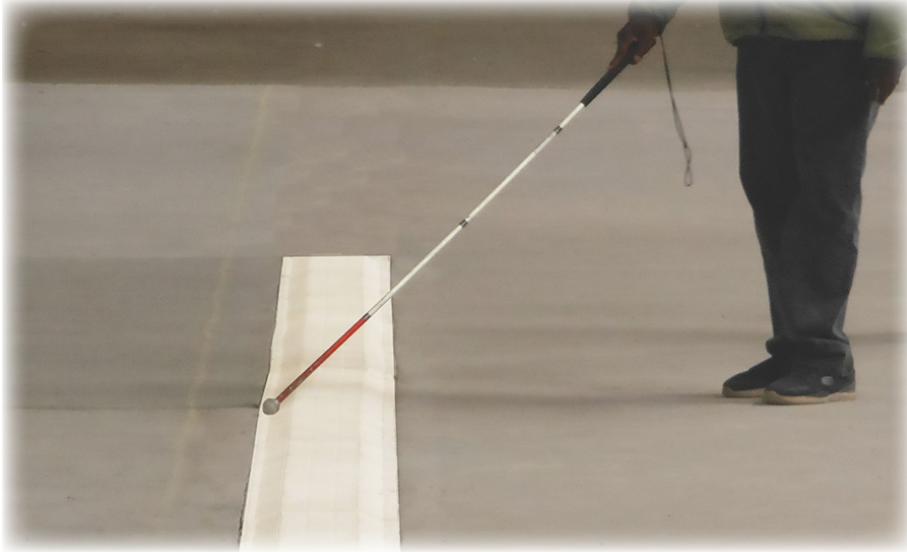

Additional Benefits Tekway offers:

- Multiple colors and sizes
- Dedicated Customer Service
- Custom-colors available

Please call **1-866-439-3216** or email at csd@stronggo.com
StrongGo Industries, 3296 E. Hemisphere Loop, Tucson, Arizona, 85706

Visit our website at: www.stronggo.com or scan QR Code

